


Paxton

SHEEP DIP **RECOMMENDED SITING INSTRUCTIONS**

1. Excavate a hole deep enough to allow for the installation of a four inch thick concrete base to support the bottom of the dipping bath.
2. Allow sufficient room around the dipping bath to enable back filling with six inches of stone free sand. In areas with a high water table back filling with concrete is recommended.
3. Ensure that the dipping bath is level before the final fixing with concrete.
4. The concrete yard area around the dipping bath should be level with the top of the dipping bath and should have a positive slope towards the bath.
5. The concrete surround should be at least 6" deep to positively hold the ground fixing ledge.

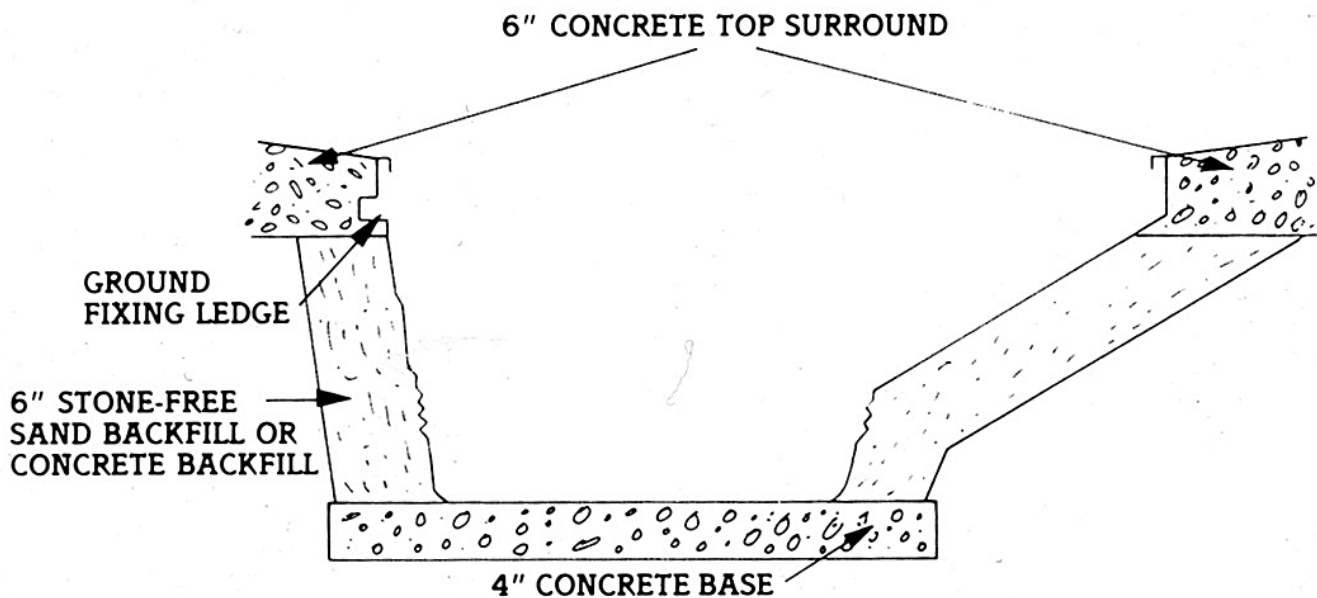

6. To prevent accidents, when not in use, sheep dipping bath should be covered.
7. **IMPORTANT** — When not in use sheep dipping bath should be filled with water to avoid unnecessary damage due to the effects of a change in the water table.